


EXTERIOR VIEW

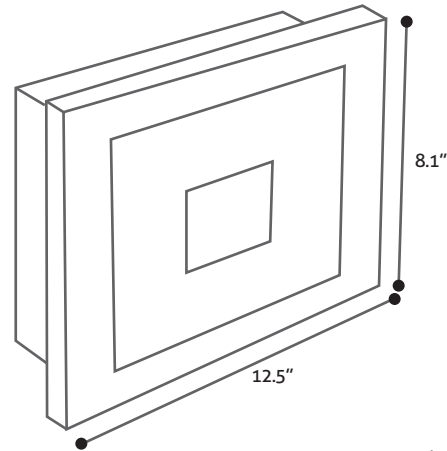


FRONT DIMENSIONS




ALL DIMENSIONS (+/-) 1/16"

REAR DIMENSIONS

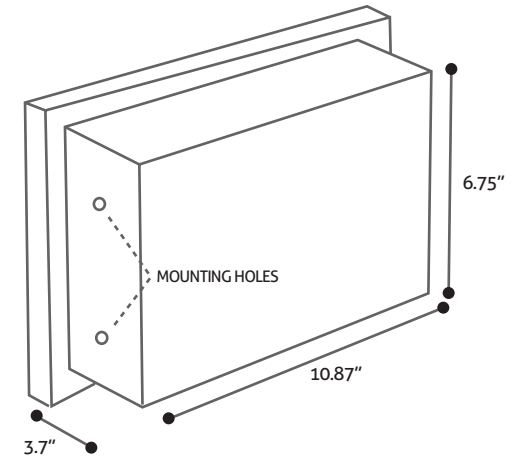


RAMPART MODEL : R623WS-6

FAST, SIMPLE INSTALLATION

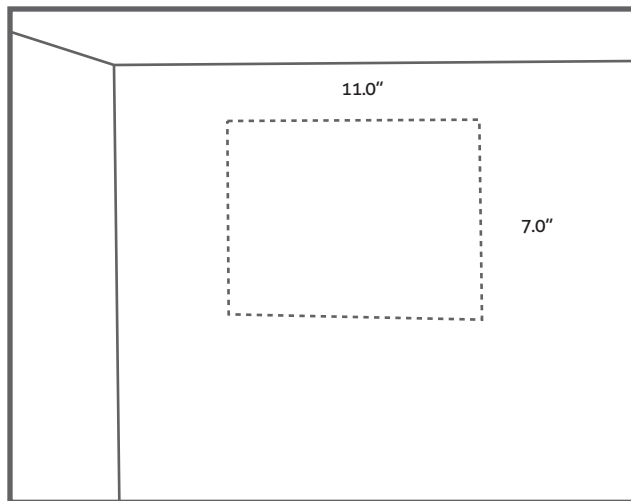

Locate wall studs and mark cut-out with pencil lines.

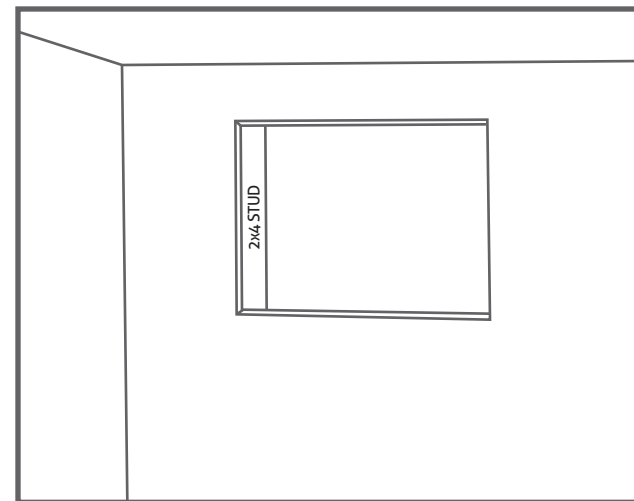

Cut sheetrock, insert safe and anchor to studs with drywall screws.